



AVVOLGITUBO AUTOMATICI

ITALIANO (lingua originale)

IT

AUTOMATIC HOSE REELS

ENGLISH (translation of original instructions)

EN

ENROULEURS AUTOMATIQUES

FRANÇAIS (version traduite de l'italien)

FR

AUTOMATISCHE SCHLAUCHAUFROLLER

DEUTSCH (Übersetzung der Originalanweisungen)

DE

ENROLLADORES AUTOMATICOS

ESPAÑOL (traducción de las instrucciones originales)

ES

IT**INDICE DEGLI ARGOMENTI**

1	INFORMAZIONI GENERALI.....	pag. 4
2	GARANZIA.....	pag. 4
3	DESCRIZIONE	pag. 4
4	FUNZIONAMENTO.....	pag. 4
5	USO PREVISTO DELLA MACCHINA.....	pag. 4
6	TARGATURA E DATI IDENTIFICATIVI	pag. 5
7	MONTAGGIO DEL TUBO	pag. 5
8	INSTALLAZIONE	pag. 6

EN**INDEX OF SUBJECT MATTERS**

1	GENERAL RULES APPLIED	page 10
2	WARRANTY	page 10
3	DESCRIPTION	page 10
4	OPERATION	page 10
5	INTENDED USE OF THE MACHINE	page 10
6	MARKING AND IDENTIFICATION	page 11
7	MOUNTING OF THE HOSE	page 11
8	INSTALLATION	page 12

FR**INDEX DES ARGUMENTS**

1	NORMES GENERALES APPLIQUEES.....	page 16
2	GARANTIE	page 16
3	DESCRIPTION	page 16
4	FONCTIONNEMENT	page 16
5	UTILISATION PREVUE DE LA MACHINE	page 16
6	ÉTIQUETAGE ET IDENTITÉ	page 17
7	MONTAGE DU TUYAU	page 17
8	INSTALLATION	page 18

DE**INHALTSVERZEICHNIS**

1	ALLGEMEINE ANGEWENDETE BESTIMMUNGEN.....	seite 22
2	GARANTIE.....	seite 22
3	BESCHREIBUNG	seite 22
4	BETRIEB.....	seite 22
5	VERWENDUNGSZWECK DER MASCHINE.....	seite 22
6	SCHILD UND IDENTIFIZIERUNGSANGABEN.....	seite 23
7	MONTAGE DES SCHLAUCHES	seite 23
8	INSTALLATION	seite 24

ES**INDICE DE CONTENIDOS**

1	NORMAS GENERALES APLICADAS	pag. 28
2	GARANTÍA.....	pag. 28
3	DESCRIPCIÓN	pag. 28
4	FUNCIONAMIENTO	pag. 28
5	UTILIZACIÓN PREVISTA DE LA MÁQUINA	pag. 28
6	ETIQUETADO E IDENTIFICACIÓN DE DATOS	pag. 29
7	MONTAJE DE LA MANGUERA	pag. 29
8	INSTALACION	pag. 30

9	ALLACCIAMENTO.....	pag. 6
10	MANUTENZIONE.....	pag. 7
11	SOSTITUZIONE DEL TUBO.....	pag. 7
12	SOSTITUZIONE DELLA MOLLA.....	pag. 8
13	SMALTIMENTO MATERIALE INQUINANTE.....	pag. 9
14	DICHIARAZIONE DI CONFORMITA'.....	pag. 9
15	DATI TECNICI.....	pag. 34

9	LINK.....	page 12
10	MAINTENANCE.....	page 13
11	REPLACEMENT OF THE HOSE.....	page 13
12	REPLACEMENT OF THE SPRING.....	page 14
13	DISPOSING OF CONTAMINATED MATERIALS.....	page 15
14	DECLARATION OF CONFORMITY.....	page 15
15	TECHNICAL DATA.....	page 34

9	BRANCHEMENT.....	page 18
10	ENTRETIEN.....	page 19
11	REPLACEMENT DU TUYAU.....	page 19
12	REPLACEMENT DU RESSORT.....	page 20
13	ELIMINATION DU MATERIEL POLLUE.....	page 21
14	DECLARATION DE CONFORMITE.....	page 21
15	FICHES TECHNIQUES.....	page 34

9	ANSCHLUSS.....	seite 24
10	WARTUNG.....	seite 25
11	AUSWECHSLUNG DES SCHLAUCHES.....	seite 25
12	AUSWECHSLUNG DER FEDER.....	seite 26
13	ENTSORGUNG VON VERSEUCHTEM MATERIAL.....	seite 27
14	CE KONFORMITÄTSERKLÄRUNG.....	seite 27
15	TECHNISCHE DATEN.....	page 34

9	CONEXION.....	pag. 30
10	MANTENIMIENTO.....	pag. 31
11	SOSTITUCION DE LA MANGUERA.....	pag. 31
12	SOSTITUCION DEL MUELLE.....	pag. 32
13	ELIMINACION DEL MATERIAL CONTAMINANTE.....	pag. 33
14	DECLARACION DE CONFORMIDAD CE.....	pag. 33
15	DATOS TÉCNICOS.....	pag. 34

1 - GENERAL RULES APPLIED

This manual is giving information about a correct assembly, use and maintenance of the hose reels in order to prevent accidents.

The hose reel has been planned in conformity to the present EEC rules.

This manual has been drafted according to the following norms:

10653 : 2003 - Technical documentation - Quality of the product technical documentation

10893 : 2000 - Product technical documentation - instructions for use - Sections and order of the content.

2 - WARRANTY

The equipment is guaranteed for a period of 18 months from date of purchase and must be used in accordance with the instructions contained in this manual. Warranty does not cover all parts which are faulty after incorrect use, incorrect installation or maintenance, maintenance carried out by unauthorized personnel, transport damages, or for circumstances not concerning manufacturing defects. The manufacturer disclaims any responsibility for any damage, that may directly or indirectly, derive to persons or property in consequence to the not observed requirements specified in this instruction manual and especially the warnings regarding installation, use and maintenance.

3 - DESCRIPTION

The hose reels models are made of hot galvanized moulded steel and painted with electrostatic polyester powder system in order to guarantee a long life of the product.

The hose rolling is done automatically by a spring made of high quality iron, incorporated in the drum. The stop can be done at any desired length, through an automatic locking device.

The hose reels supplied without hose are provided with the unloaded spring. Follow the instructions described at the chapter "HOSE ASSEMBLY".

4 - OPERATION

The automatic device to stop the hose is working on an area corresponding to 1/3 turn of the drum. For releasing the hose, put a light traction on it.



It is important always to keep the hose back when you rewind it, in order to avoid damages to the machine, injuries to people or to surrounding things.

5 - INTENDED USE OF THE MACHINE

The hose reels of the painted series are suitable for distributing oil, diesel fuel, petrol, water and urea.

All the hose reels have to be used only for distributing fluids, at the pressures and temperatures indicated on the schedule at the end of the manual. Every hose reel code is corresponding to a different kind of fluid. **It is forbidden to use the machine for any other kind of fluid.**

We decline any responsibility for anomalies or dangers which could arise by an hose assembly with characteristics and uses different from the ones described herein.

- Avoid to get on the machine or to lay any kind of material on it.
- Check periodically the correct operation of the hose reel, and control that the couplers are well locked and there are no fluid losses.
- Close the feeding of fluid at the shift end to avoid damages during non-working hours.
- **Use of the hose reel is not permitted in potential explosive environments (ATEX).**

6 - MARKING AND IDENTIFICATION



We affix the CE marking as the manufacturer of this equipment.

On the equipment is securely attached a tag with curing adhesive system on which, in addition to the name of the manufacturer and the symbol "CE", all necessary information for good identification of the machine are indicated (model, duty, year of construction, weight, etc.).

7 - MOUNTING OF THE HOSE (Models without hose)

7.3



The hose reels without hose are supplied with the unloaded spring.

Use a hose with dimension and pressure characteristics suitable for use according to the hose reel model.

7.1) Fix the hose reel to the bench.

7.2) Put the hose between the guide rollers.

IMPORTANT: Use an antistatic type hose ($R < 1 \text{ m}\Omega/\text{m}$), for oil, diesel fuel and petrol. Not required for water/urea version.


7.3



7.3) Remove plastic protection, put first the clamp and then the hose into the hose fitting. Fix the clamp and adjust it so that during rotation the hose reel is free to turn.

WARNING: Refit plastic protection and check that nothing obstructs the rotation.

7.4

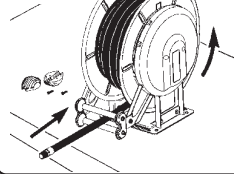


7.4) Rotate manually the drum in order to rewind completely the hose.

7.5) Spring Preload: hold the hose-end and rotate the drum in the opposite direction for a few laps, refer to the tables p.34. Insert again the hose-end between the guide rollers.


7.6) Put the hose rubber stopper at the desired length.

7.7) Unwind the hose and rewind it completely, to check if the hose reel works properly.

7.5

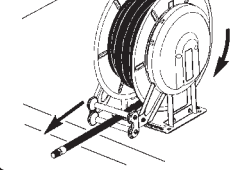

7.6

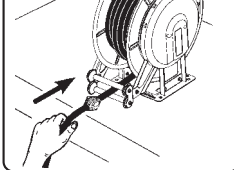

WARNING!

WARNING! DO NOT PUT HANDS OR ANY OTHER THING INSIDE THE DRUM!

8 - INSTALLATION



IMPORTANT! Any installation operation shall be carried out by a suitably trained staff, following carefully the information given in this manual.

Check the packaging at the reception of the goods and store only at a dry place. Verify that the device hasn't been damaged during transport or storage operations. Make sure you receive all the components. Ask the manufacturer for any possible missing component.

The hose reel has to be wall mounted at a minimum height of the floor of 2.50 m in order to prevent accidents during work operations. Considering the hose reel weight and dimensions, his movement requires the use of lifter devices. In particular cases it is possible to mount it on the floor or on other machines as accessory, only if complete with a fixed support. The hose-guide arms can be fixed in three different positions according to the hose reel installation (see pictures A-B-C p.35).

Mount the hose reel in fixed position or with revolving stand (optional) on stiff and consistent walls using 4 dowels of 10 mm diameter. (see drawing p.35)

WARNING! The manufacturer declines any responsibility for injuries to people or damages to things caused by a wrong assembly of the hose reel.

9 - LINK

Always connect the hose reel to the line by the couplers and the flexible hose (A) suitable for this use, above all in case of high pressure and temperature.


To avoid consequent loss of fluid tighten the fittings using appropriate keys, keep back the swivel joints to avoid damaging them.

According to the rules, put a ball-tap on the feeding line of the hose reels in order to make the maintenance operations easier. The said ball-tap can be used as a safety valve for dangerous situations.

9A - OIL, DIESEL FUEL AND PETROL VERSION

Fix the swivel (and the elbow, if any) on the hose reel connector, using a suitable sealer. Always connect the hose reel to the line by the couplers and the flexible hose (A) suitable for this use.

IMPORTANT! When you lock the coupler, keep back the swivel joint (B) by the wrench in order not to damage it.

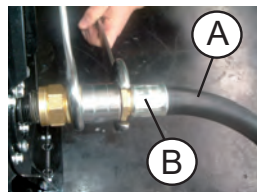

9B - WATER/UREA VERSION

The water or urea version already features a 90° swivel and a 20 mm dia. hose-end fitting, made of white non-conductive plastic. Tighten the swivel manually, fit the hose on the hose-end fitting and fasten using the clamp provided. **IMPORTANT:** no sealants are needed.



ATTENTION! According to the rules, put a ball-tap on the feeding line of the hose reels in order to make the maintenance operations easier. The said ball-tap can be used as a safety valve for dangerous situations.

10 - MAINTENANCE



IMPORTANT: Any maintenance operation shall be carried out by a suitably trained staff, following carefully the information given in this manual. Ensure that there is no tension in the spring before starting any operations inside the hose reel.

Always close the feeding of fluid to the machine before carrying out any maintenance on it. Replace the flexible hose as soon as it shows any sign of wear and tear or of deterioration due to the different conditions of the labour environment. We advise you to replace it every year in case it is used for a few hours a week.

Replace the seal inside the revolving joint in case of losses due to wear and tear. Any replacement of hose reel parts has to be done using original spare parts.


We advise you to contact the manufacturer for any possible anomaly and before replacing any part. After every maintenance operation, put again the eventual supports.

11 - REPLACEMENT OF THE HOSE




WARNING! For safety reasons, operations of hose replacement must be carried out at the bench.

Replace the hose with another one of the same dimensions and characteristics.

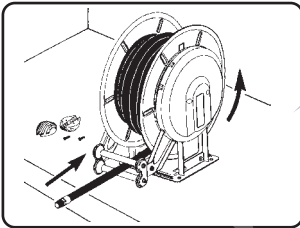

11.1

11.1) Remove the hose rubber stopper and release the hose slowly until the spring is completely unloaded.

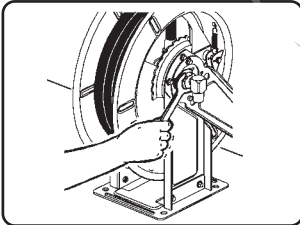

11.2

11.2) Remove the plastic protection and loosen the swivel joint.


11.3) Loosen the two screws of the spring linkage shaft by a 10 wrench.

11.4) Disassemble the opening on the spring side and unwind completely the hose from the drum.

11.5) Take out the drum, unscrew the internal fitting with the suitable wrench and mount the new hose (see the chapter "Hose assembly").


11.6) Assemble again the hose reel, by following the above steps in reverse order. If that is the case, grease the supports and the ratchet hook.

11.7) Go on as indicated at the chapter: "Mounting of the hose".

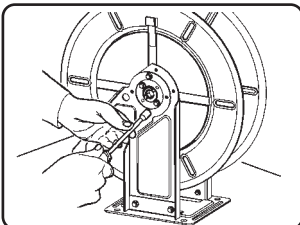


11.3

DO NOT PUT HANDS OR ANY OTHER THING INSIDE THE DRUM!

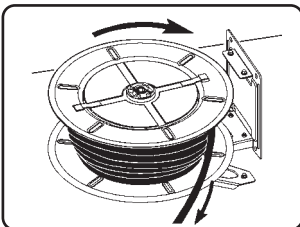

11.4

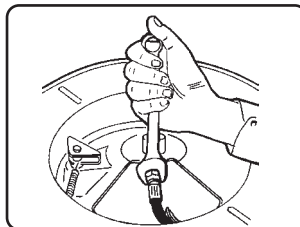

11.5


12 - REPLACEMENT OF THE SPRING

The spring which allows to rewind the hose is placed inside a proper housing centre which is joint to the drum.



WARNING! The disassembly of the spring is only permitted to the staff authorized and suitably trained by the manufacturer. Handle with the greatest care the spring; serious accidents might occur.


- 12.1) Make sure that the rewinding system is totally unloaded and that the drum is free (see point 11.1)

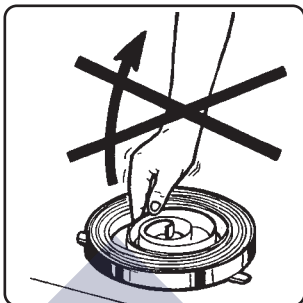

- 12.2) Loosen the swivel joint


- 12.3) Loosen the two screws of the spring linkage shaft by a 10 mm wrench (see point 11.3).

- 12.4) Disassemble the opening on the spring side by a 10 mm wrench and take out the drum.

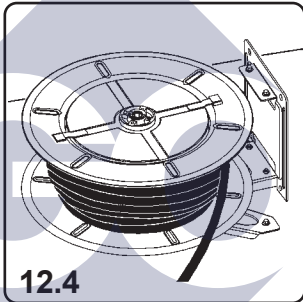


- 12.5) Take out the shaft from the spring housing.

- 12.6) Lift the tangs on the drum by a screwdriver and rotate the spring housing centre in order to release it from the drum.

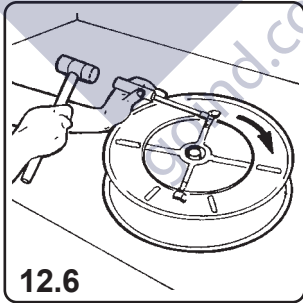





- 12.7) Turn upside down the drum and take out the spring housing centre paying the greatest care so that the spring does not go out of it.

- 12.8) Insert and hook the shaft into the new spring housing centre. Lubricate the spring and the shaft.

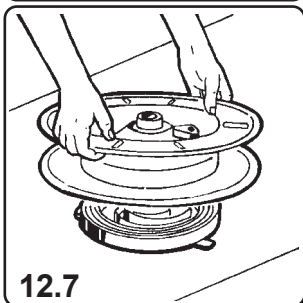

- 12.9) Put the drum straight and place the new spring housing centre with the utmost care. Block the tangs.

- 12.10) Assemble all the parts and go on as indicated at point 7.3 of the chapter "Mounting of the hose"

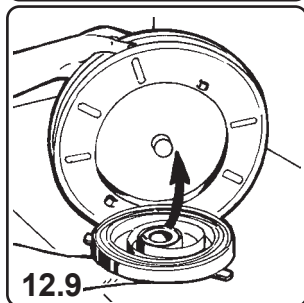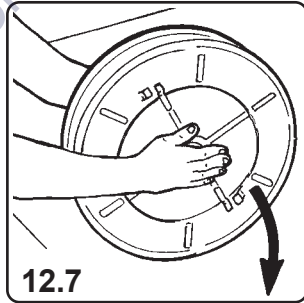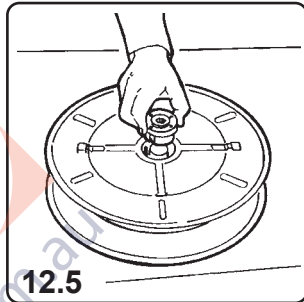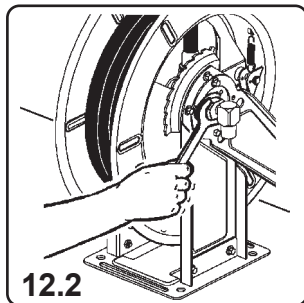

13 - DISPOSING OF CONTAMINATED MATERIALS

In case of maintenance or demolition by the machine, the parts that make it up must be sent to companies that specialize in the disposal and recycling of industrial refuse and, in particular:

DISPOSAL OF PACKING MATERIAL

The packaging consists of biodegradable cardboard which can be delivered to companies for normal recycling of cellulose.

DISPOSAL OF METAL COMPONENTS

Metal parts, whether paint-finished or in stainless steel, can be consigned to scrap metal collectors.

DISPOSAL OF OTHER PARTS:

Other components, such as hoses, rubber gaskets and plastic parts, must be disposed of by companies specialising in the disposal of industrial waste.

14 - EC DECLARATION OF CONFORMITY

The undersigned:

Adam Pumps S.p.A

Via Resistenza 48

41011 Campogalliano - MO - Italia

HEREBY STATES under its own responsibility, that the equipment described below:

Description: Automatic Reeling drum

Model: **Hose reel for hose 3/4" 8 m;**

Serial number: refer to Lot Number shown on CE plate affixed to product

Year of manufacture: refer to the year of production shown on the CE plate affixed to the product

 
is in conformity with the legal provisions indicated in the directives:

- Machine Directive 2006/42/EC

The documentation is at the disposal of the competent authority following motivated request at Adam Pumps S.p.A. or following request sent to the email address: info@adampumps.com

The person authorised to compile the technical file and draw up the declaration is Davide Stassi as legal representative.

*Campogalliano
January 14, 2020*

*Legal representative
Davide Stassi*




Obbligo di conservazione del manuale

E' fatto obbligo di conservare codesto manuale in un luogo facilmente accessibile, a disposizione di tutti gli operatori.

Obligation to preserve the manual

This manual must be kept in an easily accessible place, available to all operators.

Obligation de conservation de la notice

Il est obligatoire de conserver cette notice dans un endroit aisément accessible, à disposition de tous les opérateurs.

Erhaltungspflicht des Handbuches

Man muss das Handbuch in einem leicht erreichbaren Ort erhalten, wo jede Arbeiter es verwenden kann.

Obligación de conservar el manual

Y 'obligados a mantener codesto Manual en un lugar fácilmente accesible y disponible para todos los operadores.

Adam Pumps S.p.A.
Via Resistenza 48
41011 Campogalliano (MO) - Italy