

ENGLISH (Translated from Italian)

A INDEX

A	Index	H2	Preliminary Inspection
B	Machine and Manufacturer Identification	H3	Positioning the Pump
C	Decar. of Incorporation of partly-completed Machinery	H4	Connecting the Tubing
D	Machine Description	H5	Considerations Regarding Delivery and Suction Lines
E	Technical Data	H6	Line Accessories
E1	Performance Specifications	H7	Electrical Connections
E2	Electrical Data	I	Initial Start-Up
F	Operating Conditions	L	Daily Use
F1	Environmental Conditions	M	Problems and Solutions
F2	Electrical Power Supply	N	Maintenance
F3	Working Cycle	O	Noise Level
F4	Fluids Permitted / Fluids Not Permitted	P	Disposing of Contaminated Materials
G	Moving and Transport	Q	Exploded Diagrams and Spare Parts
H	Installation	R	Dimensions
H1	Disposing of the Packing Material		

B MACHINE AND MANUFACTURER IDENTIFICATION

Available Models: PANTHER DC 12V • PANTHER DC 24/12V
 MANUFACTURER: PIUSI SPA - VIA PACINOTTI - Z.I. RANGAVINO
 46029 SUZZARA (MN)

IDENTIFICATION PLATE (EXAMPLE WITH THE FIELDS IDENTIFIED):

PIUSI SPA 46029 SUZZARA (MN) ITALY		CE	
F0034000A		YEAR 2004	
PANTHER DC 12V			
12 V	DC	300 W	35 A
3000 rpm			
READ INSTRUCTION M0127			
PRODUCT CODE		YEAR OF MANUFACTURE	
F0034100A		YEAR 2004	
PANTHER DC 24/12V			
24/12V	DC	420/150W	25/16A
3900/1800 rpm			
READ INSTRUCTION M0127			
TECHNICAL DATA		MANUAL	

ATTENTION

Always check that the revision level of this manual coincides with what is shown on the identification plate.

C DECLARATION OF INCORPORATION OF PARTLY-COMPLETED MACHINERY

The undersigned: PIUSI S.p.A. - Via Pacinotti c.m. - z.i.Rangavino
 46029 Suzzara (Mantova) - Italy

HEREBY STATES under its own responsibility, that the partly-completed machinery:

Description: Machine designed for the transfer of diesel fuel

Model: PANTHER DC

Serial number: refer to Lot Number shown on CE plate affixed to product

Year of manufacture: refer to the year of production shown on the CE plate affixed to the product

is intended to be incorporated in a machine (or to be with other machines) so as to create a machine to which applies Machine Directive 2006/42/EC, may not be brought into service before the machine into which it is to be incorporated has been declared in conformity with the provisions of the directive 2006/42/EC.

is in conformity with the legal provisions indicated in the directives:

- Machine Directive 2006/42/EC
 - Electromagnetic Compatibility Directive 2004/108/EC

To which the essential safety requirements have been applied and compiled with what indicated on annex I of the machine directive applicable to the product and shown below: 1.1.3 - 1.1.5 - 1.3.1 - 1.3.2 - 1.3.3 - 1.3.4 - 1.3.8 - 1.4.1 - 1.4.2.1 - 1.5.1 - 1.5.2 - 1.5.4 - 1.5.5 - 1.5.8 - 1.5.11 - 1.6.1 - 1.6.3 - 1.6.4 - 1.7.1 - 1.7.2 - 1.7.3 - 1.7.4.

The documentation is at the disposal of the competent authority following motivated request at Piusi S.p.A. or following request sent to the email address: doc_tec@piusi.com.
 The person authorised to compile the technical file and draw up the declaration is Otto Varini as legal representative.

Suzzara, 29/12/2009

Otto Varini
 the legal representative

D MACHINE DESCRIPTION

PUMP: Self-Priming, volumetric, rotating vane electropump, equipped with by-pass valve.

MOTOR: Brush motor, DC, low tension with intermittent cycle, closed type in protection class IP55 according to CEI-EN 60034-5, directly flanged to the pump body.


FILTER: Checkable suction filter.

E TECHNICAL SPECIFICATIONS

E1 PERFORMANCE SPECIFICATIONS

The performance diagram shows flow rate as a function of back pressure.

Model	Flow Rate (l/min)	Voltage (V)	Absorption (A)	Back Pressure (Bar)	Typical Delivery Configuration			
					4 meters of 3/4" tube	K33 Manual dispensing nozzle Self 2000	Automatic dispensing nozzle PA60	
A (Maximum Flow Rate)	24V / 12V	12	35	12	8	0,5	•	•
	12V	12	60	12	16	0,6	•	•
B (Rated Conditions)	24V / 12V	12	33	12	11	1	•	•
	12V	12	66	12	19	1,2	•	•
C (By Pass)	24V / 12V	12	0	12	16	2,1	•	•
	12V	12	0	12	35	2,5	•	•

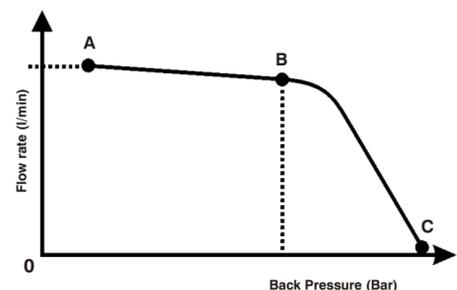

ENGLISH (Translated from Italian)

ATTENTION

The curve refers to the following operating conditions:

Fluid: Diesel Fuel
 Temperature: 20°C
 Suction Conditions: The tube and the pump position relative to the fluid level is such that a pressure of 0.3 bar is generated at the nominal flow rate.

Under different suction conditions higher pressure values can be created that reduce the flow rate compared to the same back pressure values.

To obtain the best performance, it is very important to reduce loss of suction pressure as much as possible by following these instructions:

- Shorten the suction tube as much as possible
- Avoid useless elbows or throttling in the tubes
- Keep the suction filter clean
- Use a tube with a diameter equal to, or greater than, indicated (see Installation)

The burst pressure of the pump is of 20 bar.

E2 ELECTRICAL SPECIFICATIONS

PUMP MODEL	FUSES	ELECTRICAL POWER		
		Current	Voltage (V)	Maximum (*) (Amp)
PANTHER DC 12V	40 A	DC	12	35
PANTHER DC 24/12V	30 A	DC	24 / 12	25 / 16

(*) refers to functioning with maximum back pressure

F OPERATING CONDITIONS

F1 ENVIRONMENTAL CONDITIONS

TEMPERATURE: min. -20°C / max +60°C
 RELATIVE HUMIDITY: max. 90%

ATTENTION

The temperature limits shown apply to the pump components and must be respected to avoid possible damage or malfunction.

F2 ELECTRICAL POWER SUPPLY

Depending on the model, the pump must be supplied by a single-phase alternating current line whose nominal values are shown in the table in Paragraph E2 - ELECTRICAL SPECIFICATIONS.

The maximum acceptable variations from the electrical parameters are:

Voltage: +/- 5% of the nominal value

ATTENTION

Power from lines with values outside the indicated limits can damage the electrical components.

F3 WORKING CYCLE

The pumps are designed for intermittent use with a working cycle of 30 minutes under maximum back pressure conditions.

ATTENTION

Functioning under by-pass conditions is only allowed for brief periods of time (2-3 minutes maximum).

F4 FLUIDS PERMITTED / FLUIDS NOT PERMITTED

PERMITTED:

- DIESEL FUEL at a VISCOSITY from 2 to 5.35 cSt (at a temperature of 37.8°C)
 Minimum Flash Point (PM): 55°C

NOT PERMITTED:

- GASOLINE
- INFLAMMABLE LIQUIDS with PM < 55°C
- LIQUIDS WITH VISCOSITY > 20 Cst
- WATER
- FOOD LIQUIDS
- CORROSIVE CHEMICAL PRODUCTS

RELATED DANGERS:

- FIRE - EXPLOSION
- FIRE - EXPLOSION
- MOTOR OVERLOAD
- PUMP OXIDATION
- CONTAMINATION OF THE SAME
- PUMP CORROSION
- INJURY TO PERSONS
- FIRE - EXPLOSION
- DAMAGE TO GASKET SEALS

- SOLVENTS

G MOVING AND TRANSPORT

Given the limited weight and size of the pumps (see overall dimensions), moving the pumps does not require the use of lifting devices.

The pumps were carefully packed before shipment.
 Check the packing material on delivery and store in a dry place.

H INSTALLATION

H1 DISPOSING OF THE PACKING MATERIAL

The packing material does not require special precautions for its disposal, not being in any way dangerous or polluting.

Refer to local regulations for its disposal.

H2 PRELIMINARY INSPECTION

- Check that the machine has not suffered any damage during transport or storage.
- Clean the inlet and outlet openings, removing any dust or residual packing material.
- Should the pump be without power cables, set the reeds in the terminal strip box to the desired voltage.
- Should the pump be with power cables, check that the electrical specifications correspond to those shown on the identification plate.

H3 POSITIONING THE PUMP

- The pump can be installed in any position (pump axis vertical or horizontal)
- Attach the pump using screws of adequate diameter for the attachment holes provided in the base of the pump (see the section "OVERALL DIMENSIONS" for their position and dimension).

ATTENTION

THE MOTORS ARE NOT OF AN ANTI-EXPLOSIVE TYPE. Do not install them where inflammable vapours can be present.

H4 CONNECTING THE TUBING

- Before connection, make sure that the tubing and the suction tank are free of dirt and thread residue that could damage the pump and its accessories.
- Before connecting the delivery tube, partially fill the pump body with diesel fuel to facilitate priming.
- Do not use conical threaded joints that could damage the threaded pump openings if excessively tightened.

SUCTION TUBING:
 - Minimum recommended nominal diameter: 1"
 - Nominal recommended pressure: 10 bar
 - Use tubing suitable for functioning under suction pressure

DELIVERY TUBING:
 - Minimum recommended nominal diameter: 3/4"
 - Nominal recommended pressure: 10 bar

ENGLISH (Translated from Italian)

ATTENTION

It is the installer's responsibility to use tubing with adequate characteristics.

The use of tubing unsuitable for use with diesel fuel can damage the pump, injure persons and cause pollution.
 Loosening of the connections (threaded connections, flanging, gasket seals) can cause serious ecological and safety problems.

Check all the connections after the initial installation and on a daily basis after that. Tighten the connections, if necessary.

H5 CONSIDERATIONS REGARDING DELIVERY AND SUCTION LINES

DELIVERY

The choice of pump model must be made keeping the characteristics of the system in mind.

The combination of the length of the tubing, the diameter of the tubing, the flow rate of the diesel fuel and the line accessories installed can create back pressure greater than the maximums anticipated such as to cause the

(partial) opening of the pump by-pass with the consequent noticeable reduction of the flow rate supplied.

In such cases, to allow correct functioning of the pump, it is necessary to reduce system resistance, using shorter tubing and/or of wider diameter and line accessories with less resistance (e.g. an automatic dispensing nozzle for greater flow rates).

SUCTION

PANTHER DC models are equipped with a self-priming pump with a good suction capacity.

During the start-up phase, with an empty suction tube and the pump wetted with fluid, the electric pump unit is capable of suctioning the liquid with a maximum difference in height of 2 meters. It is important to point out that the priming time can be as long as one minute and the presence of an automatic dispensing nozzle on the delivery line prevents the evacuation of air from the installation, and, therefore, prevents proper priming.

For this reason, it is always advisable to prime the pump without an automatic delivery nozzle, verifying the proper wetting of the pump. The installation of a foot valve is recommended to prevent the emptying of the suction tube and to keep the pump wet. In this way, the pump will subsequently always start up immediately.

When the system is functioning, the pump

can work with pressure at the inlet as high as 0.5 bar, beyond which cavitation phenomena can begin, with a consequent loss of flow rate and increase of system noise.

As we have said up to this point, it is important to guarantee low suction pressure by using short tubing of a diameter equal to or larger than recommended, reducing curves to a minimum and using suction filters of the widest cross-section and foot valves with the lowest possible resistance.

It is very important to keep the suction filters clean because, once clogged, they increase system resistance.

The difference in height between the pump and the fluid level must be kept as small as possible and, at any rate, within the 2 meters anticipated for the priming phase.

If this height is exceeded, it will always be necessary to install a foot valve to allow for the filling of the suction tube and provide tubing of wider diameter. It is recommended that the pump not be installed at a difference in height greater than 3 meters.

ATTENTION

In the case that the suction tank is higher than the pump, it is advisable to install an anti-siphon valve to prevent accidental diesel fuel leaks.
 Dimension the installation in order to control the back pressures due to water hammering.

H6 LINE ACCESSORIES

The pumps are furnished without line accessories. Following is a list of the most common

line accessories whose use is compatible with the proper functioning of the pumps.

DELIVERY

- Automatic dispensing nozzle
- Manual dispensing nozzle
- Meter
- Flexible tubing

SUCTION

- Foot valve with filter
- Rigid and flexible tubing

ATTENTION


It is the installer's responsibility to provide the line accessories necessary for the safe and proper functioning of the pump.
 The use of accessories unsuitable for use with diesel fuel can damage the pump, injure persons and cause pollution.

H7 ELECTRICAL CONNECTIONS

The electrical box of Panther DC comes with a terminal board for the power cord connection (optional).

In case of connection of the cable kit with pliers (Piusi optional), proceed as follows:

- loosen the cable ring nut with rubber (4) and insert the cable.
- open the cable U-bolt (3) which is located inside the electrical box.
- fix the eyelet (for screw M4) of the positive cable (blue) to the terminal, in position 1 (see reference in the diagram).
- fix the eyelet (for screw M4) of the negative cable (brown) to the terminal, in position 2 (see reference in the diagram).
- tighten the U-bolt (3).
- screw the ring nut (4)

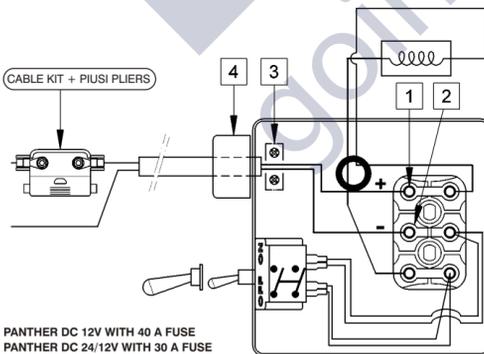

PANTHER DC 12V WITH 40 A FUSE
 PANTHER DC 24/12V WITH 30 A FUSE

In the event of power connection with cable not supplied by Piusi, it is necessary to observe the following characteristics:

- for Panther DC 12 V - use a bipolar cable with minimum section of 6 mm²
- for Panther DC 24/12 V - use a bipolar cable with minimum section of 4 mm²

It is important to use a 40A fuse for the 12V version and a 30A fuse for the 24/12 V version, to prevent the pump motor from being damaged in the event of a short circuit.

ATTENTION

IT IS THE INSTALLER'S RESPONSIBILITY TO PERFORM THE ELECTRICAL CONNECTIONS WITH RESPECT FOR THE APPLICABLE REGULATIONS.

Respect the following (not exhaustive) instructions to ensure a proper electrical installation:

- During installation and maintenance, make sure that the electric supply lines are not live.
- characteristics shown in Paragraph E2 - ELECTRICAL SPECIFICATIONS and the installation environment.

- Use cables characterized by the minimum cross-sections, nominal voltages and wiring-type adequate to the electrical
- Always close the cover of the strip box before supplying electrical power.

ENGLISH (Translated from Italian)

I INITIAL START-UP

- Check that the quantity of diesel fuel in the suction tank is greater than the amount you wish to transfer.

fuel leaks can damage objects and injure persons.

- Make sure that the residual capacity of the delivery tank is greater than the quantity you wish to transfer.

• Never start or stop the pump by connecting or cutting out the power supply.

- Do not run the pump dry. This can cause serious damage to its components.

• Do not operate switches with wet hands.

- Make sure that the tubing and line accessories are in good condition. Diesel

• Prolonged contact with diesel fuel can damage the skin.
 The use of glasses and gloves is recommended.

ATTENTION

Extreme operating conditions can raise the motor temperature. Turn off the pump and wait for it to cool before resuming it.

In the priming phase the pump must blow the air initially present in the entire installation out of the delivery line.

Therefore it is necessary to keep the outlet open to permit the evacuation of the air.

ATTENTION

If an automatic type dispensing nozzle is installed at the end of the delivery line, the evacuation of the air will be difficult because of the automatic stopping device that keeps the valve closed when the line pressure is too low. It is recommended that the automatic dispensing nozzle be temporarily disconnected during the initial start-up phase.

The priming phase can last from several seconds to a few minutes, as a function of the characteristics of the system. If this phase is prolonged, stop the pump and verify:

- That the pump is not running completely dry;
- That the suction tubing is not allowing air to seep in;
- That the suction filter is not clogged;
- That the suction height does not exceed 2 m. (if the height exceeds 2 m, fill the suction hose with fluid);
- That the delivery tube is allowing the evacuation of the air;
- check the exact rotation direction of the motor: it must be in a counter-clockwise mode considering the motor from pos. 1 of the exploded diagram.

When priming has occurred, verify that the pump is operating within the anticipated range, in particular:

- That under conditions of maximum back pressure, the power absorption of the motor stays within the values shown on the identification plate;
- That the suction pressure is not greater than 0.5 bar;
- That the back pressure in the delivery line is not greater than the maximum back pressure foreseen for the pump.

L DAILY USE

- a. If using flexible tubing, attach the ends of the tubing to the tanks. In the absence of an appropriate slot, solidly grasp the delivery tube before beginning dispensing.

valve allows functioning with delivery closed only for brief periods.

d. Open the delivery valve, solidly grasping the end of the tubing.

- b. Before starting the pump make sure that the delivery valve is closed (dispensing nozzle or line valve).

e. Close the delivery valve to stop dispensing.

f. When dispensing is finished, turn off the pump.

ATTENTION

Functioning with the delivery closed is only allowed for brief periods (2/3 minutes maximum). Functioning in nominal conditions is limited to a working cycle of 30 min. If this time is exceeded, turn off the pump and wait for it to cool. After use, make sure the pump is turned off.

M PROBLEMS AND SOLUTIONS

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
THE MOTOR IS NOT TURNING	Lack of electric power	Check the electrical connections
	Rotor jammed	Check for possible damage or obstruction of the rotating components
	Motor problems Burnt out fuse	Contact the Service Department Replace the fuse
THE MOTOR TURNS SLOWLY WHEN STARTING	Low voltage in the electric power line	Bring the voltage back within the anticipated limits
	Low level in the suction tank Foot valve blocked Filter clogged	Refill the tank Clean and/or replace the valve Clean the filter
LOW OR NO FLOW RATE	Excessive suction pressure	Lower the pump with respect to the level of the tank or increase the cross-section of the tubing
	High loss of head in the delivery circuit (working with the by-pass open)	Use shorter tubing or of greater diameter
	By-pass valve blocked	Dismantle the valve, clean and/or replace it
	Air entering the pump or the suction tubing	Check the seals of the connections
	A narrowing in the suction tubing	Use tubing suitable for working under suction pressure
INCREASED PUMP NOISE	Low rotation speed	Check the voltage at the pump. Adjust the voltage and/or use cables of greater cross-section
	The suction tubing is resting on the bottom of the tank	Raise the tubing
LEAKAGE FROM THE PUMP BODY	Cavitation occurring	Reduce suction pressure
	Irregular functioning of the by-pass Air present in the diesel fuel	Dispense fuel until the air is purged from the by-pass system Verify the suction connections
	Seal damaged	Check and replace the seal

N MAINTENANCE

PANTHER DC are designed and constructed to require a minimum of maintenance.

A INDICE

A	Indice	H2	Controlli Preliminari
B	Identificazione Macchina e Costruttore	H3	Posizionamento della pompa
C	Dichiaraz. di incorporazione delle quasi-macchine	H4	Collegamento delle tubazioni
D	Descrizione della Macchina	H5	Considerazioni sulle linee di mandata e aspirazione
E	Dati tecnici	H6	Accessori di linea
E1	Prestazioni	H7	Collegamenti elettrici
E2	Dati Elettrici	I	Primo avviamento
F	Condizioni Operative	L	Uso giornaliero
F1	Condizioni Ambientali	M	Problemi e soluzioni
F2	Alimentazione Elettrica	N	Manutenzione
F3	Ciclo di Lavoro	O	Livello di rumore
F4	Fluidi Ammessi / Non Ammessi	P	Smaltimento di materiale inquinato
G	Movimentazione e Trasporto	Q	Esplosi e parti di ricambio
H	Installazione	R	Ingombri
H1	Smaltimento Imballo		

B IDENTIFICAZIONE MACCHINA E COSTRUTTORE

Modelli disponibili: PANTHER DC 12V • PANTHER DC 24/12V
 COSTRUTTORE: PIUSI SPA - VIA PACINOTTI - Z.I. RANGAVINO
 46029 SUZZARA (MN)

TARGHETTA (ESEMPIO CON IDENTIFICAZIONE DEI CAMPI):

PIUSI PIUSI SPA 46029 SUZZARA (MN) ITALY		CE	
F0034000A	YEAR 2004	— ANNO DI PRODUZIONE	
PANTHER DC 12V			
12 V	DC	300 W	35 A
3000 rpm			
READ INSTRUCTION M0127			
CODICE PRODOTTO			
DATI TECNICI			
MANUALE			

ATTENZIONE

Controllare sempre che la revisione del presente manuale coincida con quella indicata sulla targhetta.

C DICHIARAZIONE DI INCORPORAZIONE DELLE QUASI MACCHINE

La sottoscritta: PIUSI S.p.A. - Via Pacinotti c.m. - z.i.Rangavino
 46029 Suzzara (Mantova) - Italia

DICHIARA sotto la propria responsabilità, che la quasi macchina:

Descrizione: Macchina destinata al travaso di gasolio

Modello: PANTHER DC

Matrici: riferirsi al Lot Number riportato sulla targa CE apposta sul prodotto

Anno di costruzione: riferirsi all'anno di produzione riportato sulla targa CE apposta sul prodotto

è destinata ad essere incorporata in una macchina (o ad essere con altre macchine) onde costituire una macchina cui si applica la Direttiva Macchine 2006/42/CE, non potrà essere messa in servizio prima che la macchina nella quale sarà incorporata venga dichiarata conforme alle disposizioni della direttiva 2006/42/CE.

è conforme alle disposizioni legislative che traspongono le direttive:

- Direttiva Macchine 2006/42/CE

- Direttiva Compatibilità Elettromagnetica 2004/108/CE

Alla quale sono stati applicati e rispettati i requisiti essenziali di sicurezza, riportati negli allegati I della direttiva macchina applicabili al prodotto e riportati di seguito: 1.1.3 - 1.1.5 - 1.3.1 - 1.3.2 - 1.3.3 - 1.3.4 - 1.3.8 - 1.4.1 - 1.4.2.1 - 1.5.1 - 1.5.2 - 1.5.4 - 1.5.5 - 1.5.8 - 1.5.11 - 1.6.1 - 1.6.3 - 1.6.4 - 1.7.1 - 1.7.2 - 1.7.3 - 1.7.4.

La documentazione è a disposizione dell'autorità competente su motivata richiesta presso Piusi S.p.A. o richiedendola all'indirizzo e-mail: doc_tec@piusi.com
 La persona autorizzata a costituire il fascicolo tecnico e a redigere la dichiarazione è Otto Varini in qualità di legale rappresentante.

Suzzara, 29/12/2009

Otto Varini
 il legale rappresentante

D DESCRIZIONE DELLA MACCHINA

POMPA: Elettropompa rotativa autoadescente di tipo volumetrico a palette, equipaggiata con valvola di by-pass.


MOTORE: Motore a spazzole alimentato con corrente continua in bassa tensione con ciclo intermittente, chiuso in classe di protezione IP55 secondo CEI EN 60034-5 direttamente flangiato al corpo pompa.

FILTRO: Filtro di aspirazione ispezionabile.

E DATI TECNICI**E1 PRESTAZIONI**

Il diagramma delle prestazioni, mostra la portata in funzione della contropressione.

Modello	Portata (l/min)	Tensione (V)	Assorbimento (A)	Contropressione (Bar)	Tipica configurazione in mandata			
					4 metri tubo da 3/4"	K33	Pistola manuale SMI 2000	
A (Max portata)	24V / 12 V	12	35	12	8	0,5	•	•
	12 V	24	72	24	15	0,5	•	•
	12 V	12	60	12	16	0,6	•	•
B (Condizioni Normali)	24V / 12 V	12	33	12	11	1	•	•
	12 V	24	66	24	19	1,2	•	•
	12 V	12	56	12	23	1,1	•	•
C (By Pass)	24V / 12 V	12	0	12	16	2	•	•
	12 V	24	0	24	25	2,6	•	•
	12 V	12	0	12	35	2,5	•	•

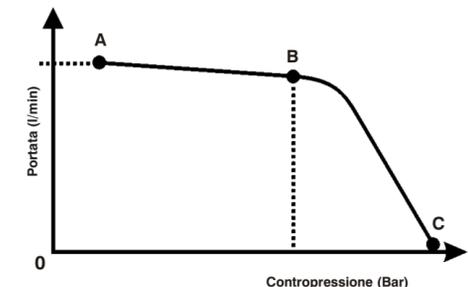**ATTENZIONE**

La curva si riferisce alle seguenti condizioni operative:

Fluidi: Gasolio
 Temperatura: 20° C
 Condizioni di aspirazione: Il tubo e la posizione della pompa rispetto al livello del fluido è tale che si generi una depressione di 0,3 bar alla portata nominale.

Con diverse condizioni di aspirazione si possono creare valori più alti della depressione che riducono la portata a fronte degli stessi valori di contropressione. Per ottenere le migliori prestazioni è molto importante ridurre il più possibile le perdite di pressione in aspirazione seguendo le seguenti indicazioni:

- accorciare il più possibile il tubo di aspirazione
- evitare inutili gomiti o strozzamenti nei tubi
- tenere pulito il filtro di aspirazione
- usare un tubo di diametro uguale o maggiore al minimo indicato (vedi installazione)

La pressione di scoppio della pompa è di 20 bar.

E2 DATI ELETTRICI

MODELLO POMPA	FUSIBILI	ALIMENTAZIONE			CORRENTE
		Corrente	Voltaggio (V)	Massima (*) (Amp)	
PANTHER DC 12V	40 A	DC	12	35	
PANTHER DC 24/12V	30 A	DC	24 / 12	25 / 16	

(*) si riferiscono al funzionamento con la massima contropressione.

F CONDIZIONI OPERATIVE**F1 CONDIZIONI AMBIENTALI**

TEMPERATURA: min. -20°C / max +60°C

UMIDITA' RELATIVA: max. 90%

ATTENZIONE

Le temperature limite indicate si applicano ai componenti della pompa e devono essere rispettate per evitare possibili danneggiamenti o malfunzionamenti.

F2 ALIMENTAZIONE ELETTRICA

In funzione del modello, la pompa deve essere alimentata da linea un corrente continua i cui valori nominali sono indicati nella tabella del paragrafo E2-DATI ELETTRICI

Le massime variazioni accettabili per i parametri elettrici sono:

Tensione: +/- 5% del valore nominale

ATTENZIONE

L'alimentazione da linee con valori al di fuori dei limiti indicati, può causare danni ai componenti elettrici.

F3 CICLO DI LAVORO

Le pompe sono progettate per uso intermittente con un ciclo di lavoro di 30 min in condizioni di massima contropressione.

ATTENZIONE

Il funzionamento in condizioni di by-pass è ammesso solo per periodi brevi (2/3 minuti massimo).

F4 FLUIDI AMMESSI / FLUIDI NON AMMESSI**AMMESSI:**

- GASOLIO a VISCOSITA' da 2 a 5,35 cSt (a temperatura 37,8°C)
- Punto di infiammabilità minimo (PM): 55°C

NON AMMESSI:

- BENZINA
- LIQUIDI INFIAMMABILI con PM < 55°C
- LIQUIDI CON VISCOSITA' > 20 cSt
- ACQUA
- LIQUIDI ALIMENTARI
- PRODOTTI CHIMICI CORROSI
- SOLVENTI
- PERICOLI RELATIVI:
- INCENDIO - ESPLOSIONE
- INCENDIO - ESPLOSIONE
- SOVRACCARICO DEL MOTORE
- OSSIDAZIONE DELLA POMPA
- CONTAMINAZIONE DEGLI STESSI
- CORROSIONE DELLA POMPA
- DANNI ALLE PERSONE
- INCENDIO - ESPLOSIONE
- DANNI ALLE GUARNIZIONI

G MOVIMENTAZIONE E TRASPORTO

Dato il limitato peso e dimensione delle pompe (vedere Ingombri), la movimentazione delle pompe non richiede l'uso di mezzi di sollevamento.

Prima della spedizione le pompe sono accuratamente imballate. Controllare l'imballo al ricevimento e immagazzinare in luogo asciutto.

H INSTALLAZIONE**H1 SMALTIMENTO IMBALLO**

Il materiale di imballo non richiede speciali precauzioni di smaltimento, non essendo in alcun modo pericoloso o inquinante.

Per lo smaltimento fare riferimento ai regolamenti locali.

H2 CONTROLLI PRELIMINARI

- Controllare che la macchina non abbia subito danni durante il trasporto o l'immagazzinamento.
- Pulire con cura le bocche di aspirazione e mandata rimuovendo eventuale polvere o materiale d'imballo residuo.
- Nel caso di pompa senza cavi di alimentazione, configurare le lamelle nella scatola morsettiere alla tensione desiderata.
- Nel caso di pompa con i cavi di alimentazione controllare che i dati elettrici corrispondano con quelli indicati in targhetta.

H3 POSIZIONAMENTO DELLA POMPA

- La pompa può essere installata in qualunque posizione (asse pompa verticale o orizzontale).
- Fissare la pompa utilizzando viti di diametro adeguato ai fori di fissaggio previsti nel supporto pompa (vedi sezione "INGOMBRI" per posizione e dimensione di questi).

ATTENZIONE

I MOTORI NON SONO DI TIPO ANTIDEFLAGRANTE. Non installare dove possono essere presenti vapori infiammabili.

H4 COLLEGAMENTO DELLE TUBAZIONI

- Prima del collegamento accertarsi che le tubazioni e il serbatoio di aspirazione siano privi di scorie o residui di filettatura che potrebbero danneggiare la pompa e gli accessori.
- Prima di collegare la tubazione di mandata riempire parzialmente il corpo pompa con gasolio per facilitare l'adesamento.
- Non utilizzare giunti di collegamento a filettatura conica che potrebbero causare danni alle bocche filettate delle pompe se serrati eccessivamente.

TUBAZIONE DI ASPIRAZIONE:

- Diametri nominali minimi raccomandati: 1"
- Pressione nominale raccomandata: 10 bar
- Utilizzare tubazioni adatte a funzionamento in depressione

TUBAZIONE DI MANDATA:

- Diametri nominali minimi raccomandati: 3/4"
- Pressione nominale raccomandata: 10 bar

ATTENZIONE

E' responsabilità dell'installatore utilizzare tubazione di adeguate caratteristiche. L'utilizzo di tubazioni inadatte all'uso con gasolio può causare danni alla pompa o alle persone e inquinamento. L'allentamento delle connessioni (connessioni filettate, flangiature, guarnizioni) può causare seri problemi ecologici e di sicurezza. Controllare tutte le connessioni dopo la prima installazione e successivamente quotidianamente. Se necessario serrare tutte le connessioni.

H5 CONSIDERAZIONI SULLE LINEE DI MANDATA E ASPIRAZIONE**MANDATA**

La scelta del modello di pompa dovrà essere fatta tenendo conto delle caratteristiche dell'impianto.

La combinazione della lunghezza del tubo, del diametro del tubo, della portata di gasolio e degli accessori di linea installati, possono creare contropressioni superiori a quelle massime previste tali da causare l'apertura

ASPIRAZIONE

Le PANTHER DC sono equipaggiate con pompa autoadescente e caratterizzata da una buona capacità di aspirazione.

Durante la fase di avviamento con tubo d'aspirazione svuotato e pompa bagnata dal fluido, il gruppo elettropompa è in grado di aspirare il liquido con un dislivello massimo di 2 metri. E' importante segnalare che il tempo d'adesamento può durare fino a un minuto e l'eventuale presenza di una pistola automatica in mandata impedisce l'evacuazione dell'aria dall'installazione, e quindi il corretto adesamento. Pertanto è sempre consigliabile eseguire le operazioni di adesamento senza pistola automatica, verificando la corretta bagnatura della pompa. Si raccomanda di installare sempre una valvola di fondo per impedire lo svuotamento della tubazione di aspirazione e mantenerla bagnata la pompa; in questo modo le successive operazioni di avviamento saranno sempre immediate.

Quando l'impianto è in funzione, la pompa può lavorare con depressioni alla bocca

ATTENZIONE

Nel caso che il serbatoio d'aspirazione risulti più alto della pompa è consigliabile prevedere una valvola rompi-sifone per impedire accidentali fuoriuscite di gasolio. Dimensionare l'installazione al fine di contenere le sovrappressioni dovute al colpo d'ariete.

H6 ACCESSORI DI LINEA

Le pompe sono fornite senza accessori di linea. Nel seguito sono elencati i più comuni

MANDATA

- Pistole automatiche
- Pistola manuale
- Contaltri
- Tubazioni flessibili

(parziale) del bypass della pompa con conseguente sensibile riduzione della portata erogata.

In questi casi, per consentire un corretto funzionamento della pompa, è necessario ridurre le resistenze dell'impianto, utilizzando tubazioni più corte e/o di maggior diametro ed accessori di linea con resistenze minime (es. una pistola automatica per portate maggiori).

d'aspirazione fino a 0,5 bar, dopodiché possono avere inizio fenomeni di cavitazione, con conseguente caduta della portata e aumento della rumorosità dell'impianto.

Per quanto esposto è importante garantire basse depressioni all'aspirazione, utilizzando tubazioni brevi e di diametro maggiore o uguale a quello consigliato, ridurre al minimo le curve e utilizzare filtri in aspirazione di ampia sezione e valvole di fondo con la minima resistenza possibile.

E molto importante mantenere puliti i filtri d'aspirazione perché una volta intasati aumentano la resistenza dell'impianto. Il dislivello tra pompa e livello del fluido deve essere mantenuto il più basso possibile e comunque entro i 2 metri previsti per la fase d'adesamento. Se si supera questa altezza occorre installare sempre una valvola di fondo per consentire il riempimento della tubazione d'aspirazione, e prevedere tubazioni di diametro maggiore. Si consiglia comunque di non installare la pompa per dislivelli maggiori di 3 metri.

ASPIRAZIONE

- Valvola di fondo con filtro
- Tubazioni rigide e flessibili

ATTENZIONE


E' responsabilità dell'installatore provvedere agli accessori di linea necessari per un sicuro e corretto funzionamento della pompa. L'uso di accessori inadatti all'uso con gasolio può causare danni alla pompa o alle persone e inquinamento.

H7 COLLEGAMENTI ELETTRICI

La scatola elettrica della panther DC, è completa di morsettiere per il collegamento del cavo di alimentazione (opzionale).

In caso di collegamento del kit cavo con pinze fornito come kit opzionale da Piusi, procedere come segue:

- svitare la ghiera passacavo con gommino (4) ed infilare il cavo.
- aprire il cavallotto pressacavo (3) posto all'interno della scatola elettrica.
- fissare l'occhiello (per vite M4) del cavo positivo (blu) al morsetto, in posizione 1 (vedi riferimento nello schema).
- fissare l'occhiello (per vite M4) del cavo negativo (marrone) al morsetto, in posizione 2 (vedi riferimento nello schema).
- stringere il cavallotto (3).
- avvitare la ghiera (4)

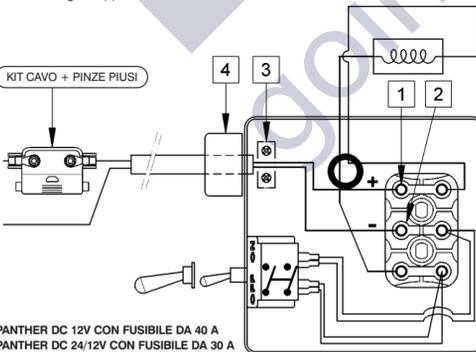

PANTHER DC 12V CON FUSIBILE DA 40 A
 PANTHER DC 24/12V CON FUSIBILE DA 30 A

Nel caso di collegamento alimentazione con cavo non fornito da Piusi, è necessario rispettare le caratteristiche riportate di seguito:

- per Panther DC 12V - usare cavo bipolare con sezione minima di 6 mmq
- per panther DC 24/12V - usare cavo bipolare con sezione minima di 4 mmq

E' importante prevedere l'utilizzo di un fusibile da 40A per la versione a 12V e da 30A per la versione a 24/12V, per evitare il rischio di danneggiare il motore della pompa in caso di corto circuito.

ATTENZIONE

E' RESPONSABILITÀ DELL'INSTALLATORE EFFETTUARE IL COLLEGAMENTO ELETTRICO NEL RISPETTO DELLE APPLICABILI NORMATIVE.

Rispettare le seguenti indicazioni (non esautive) per assicurare una corretta installazione elettrica:

- Durante l'installazione e le manutenzioni accertarsi che le linee elettriche di alimentazione non siano sotto tensione.
- Chiedere sempre il coperchio della scatola morsettiere prima di fornire alimentazione elettrica.

- Utilizzare cavi caratterizzati da sezioni minime, tensioni nominali e tipo di posa adeguati alle caratteristiche elettriche

I PRIMO AVVIAMENTO

- Controllare che la quantità di gasolio presente nel serbatoio di aspirazione sia maggiore di quella che si desidera trasferire.
- Assicurarsi che la capacità residua del serbatoio di mandata sia maggiore di quella che si desidera trasferire.
- Non utilizzare la pompa a secco; ciò può comportare seri danni ai suoi componenti.
- Assicurarsi che le tubazioni e gli accessori

di linea siano in buone condizioni. Perdite di gasolio possono causare danni a cose e persone.

- Non avviare o arrestare mai la pompa in senso o disinsensando l'alimentazione.
- Non intervenire sugli interruttori a mani bagnate.

- Un prolungato contatto della pelle con il gasolio può provocare danni. L'utilizzo di occhiali e quanti è raccomandato.

ATTENZIONE

Condizioni operative estreme possono causare l'innalzamento della temperatura del motore. Spegnerne la pompa e attendere il raffreddamento prima di riprenderne l'uso.

Nella fase di adesamento la pompa deve scaricare dalla linea di mandata l'aria inizialmente presente in tutta l'installazione.

Pertanto è necessario mantenere aperto lo scarico per consentire l'evacuazione dell'aria.

ATTENZIONE

Se alla fine della linea di mandata è installata una pistola di tipo automatico, l'evacuazione dell'aria può essere difficoltosa a causa del dispositivo d'arresto automatico che mantiene la valvola chiusa quando la pressione della linea è troppo bassa. E' raccomandato smontare provvisoriamente la pistola automatica nella fase di primo avviamento.

La fase di adesamento può durare da qualche secondo a pochi minuti, in funzione delle caratteristiche dell'impianto. Se tale fase si prolunga arrestare la pompa e verificare:

- che la pompa non giri completamente a secco;
- che la tubazione di aspirazione garantisca l'assenza di infiltrazioni;
- che il filtro in aspirazione non sia intasato;
- che l'altezza di aspirazione non sia maggiore di 2 mt. (se l'altezza è maggiore di 2 mt.,

- riempire il tubo d'aspirazione di fluido);
- che la tubazione di mandata garantisca l'evacuazione dell'aria.
- l'esatto senso di rotazione del motore; deve essere in senso antiorario, guardando il motore dalla pos. 1 del disegno esplos.

Ad adesamento avvenuto, verificare che la pompa funzioni all'interno del campo previsto, in particolare:

- che nelle condizioni di massima contropressione l'assorbimento del motore rientri nei valori indicati in targhetta;
- che la depressione in aspirazione non

- superi 0,5 bar;
- che la contropressione in mandata non superi la massima contropressione prevista dalla pompa.

L USO GIORNALIERO

- a. Se si utilizzano tubazioni flessibili, fissare le estremità di queste ai serbatoi. In caso di assenza di opportuni alloggiamenti, impugnare saldamente l'estremità della tubazione di mandata prima di iniziare l'erogazione.

valvola di by-pass consente il funzionamento a mandata chiusa solo per brevi periodi.

d. Aprire la valvola in mandata, impugnando saldamente l'estremità della tubazione.

- b. Prima di avviare la pompa assicurarsi che la valvola in mandata sia chiusa (pistola di erogazione o valvola di linea).

e. Chiudere la valvola in mandata per arrestare l'erogazione.

- c. Azionare l'interruttore di marcia. La

f. Quando l'erogazione è completata spegnere la pompa.

ATTENZIONE

Il funzionamento a mandata chiusa è ammesso solo per brevi periodi (2 / 3 minuti max). Il funzionamento in condizioni nominali è limitato ad un ciclo di lavoro di 30 minuti. Se si supera questo tempo occorre spegnere la pompa e attendere il suo raffreddamento. Dopo l'uso assicurarsi che la pompa sia spenta.

M PROBLEMI E SOLUZIONI

PROBLEMA	POSSIBILE CAUSA	AZIONE CORRETTIVA
IL MOTORE NON GIRA	Mancanza di alimentazione	Controllare le connessioni elettriche ed i sistemi di sicurezza
	Rotore bloccato	Controllare possibili danni o ostruzioni agli organi rotanti
	Problemi al motore	Contattare il Servizio Assistenza
	Fusibile bruciato	Sostituire il fusibile